

SECTION 4

NAVIGATION SYSTEM: MEMORY POINTS


- [Navigation settings](#) 108
 - [Setting up the "Home"](#) 109
 - [Setting up the "Preset Destinations"](#) 111
 - [Setting up the "Address Book"](#) 114
 - [Setting up the "Areas to Avoid"](#) 120
 - [Deleting previous destinations](#) 125

Navigation settings —


Points or areas on the map can be registered.

The registered points can be used on the “Destination” screen. (See “— Destination search by Home” on page 62, “— Destination search by Preset destinations” on page 62 and “— Destination search by “Address Book”” on page 75.)

Registered areas are avoided at the time of route search.

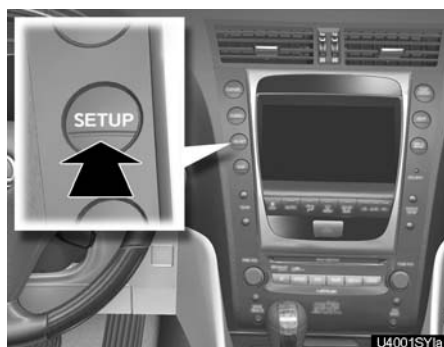

1. Push the “SETUP” button.

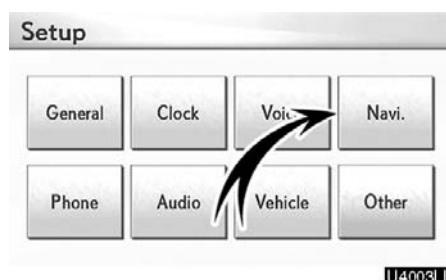

2. Touch “Navi.”.



On this screen, the following operations can be performed.

No.	Function
1	Sets home (See page 109.)
2	Sets preset destinations (See page 111.)
3	Sets address book (See page 114.)
4	Sets area to avoid (See page 120.)
5	Deletes previous destinations (See page 125.)
6	Detailed navigation settings (See page 170.)

— Setting up the “Home”

If home has been registered, that information can be recalled by using “Go Home” on the “Destination” screen. (See “— Destination search by Home” on page 62.)

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Home”.



- Registering home (See page 109.)
- Editing home (See page 110.)
- Deleting home (See page 111.)

(a) Registering home

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Home” on the “Navigation Settings” screen.




4. Touch “Set Home”.



5. Enter the location in the same way as for a destination search. (See “Destination search” on page 60.)

NAVIGATION SYSTEM: MEMORY POINTS

When registration of home is completed, the "Edit Home" screen will be displayed.

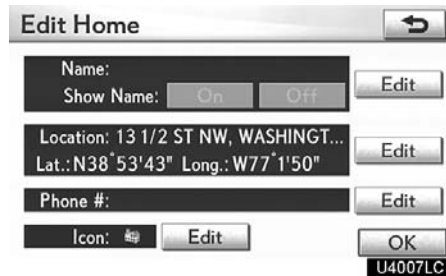

6. Touch "OK".


To edit registered information, see "(b) Editing home" on page 110.

(b) Editing home

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Home" on the "Navigation Settings" screen.



4. Touch "Edit".



5. Touch "Edit" for the item you want to change.

"Name": To edit home name. The names can be displayed on the map. (See page 118.)

"Location": To edit location information. (See page 119.)

"Phone #": To edit telephone numbers. (See page 119.)

"Icon": To select icons to be displayed on the map. (See page 117.)

6. Touch "OK".

(c) Deleting home

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Home" on the "Navigation Settings" screen.



4. Touch "Delete".
5. To delete home, touch "Yes". To cancel the deletion, touch "No".

— Setting up the "Preset Destinations"

If preset destination has been registered, that information can be recalled by using "Preset Destination" on the "Destination" screen. (See "— Destination search by Preset destinations" on page 62.)

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.



3. Touch "Preset Destinations".



- Registering preset destination (See page 112.)
- Editing preset destination (See page 113.)
- Deleting preset destination (See page 114.)

NAVIGATION SYSTEM: MEMORY POINTS

(a) Registering preset destinations


1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Set".



5. Enter the location in the same way as for a destination search. (See "Destination search" on page 60.)

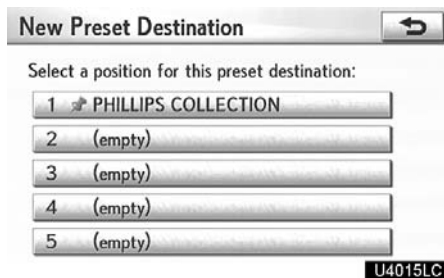

6. Touch a position for this preset destination.

When registration of preset destination is completed, the "Edit Preset Destination" screen will be displayed.



7. Touch "OK".


To edit registered information, see "(b) Editing preset destinations" on page 113.

(b) Editing preset destinations


1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Edit".

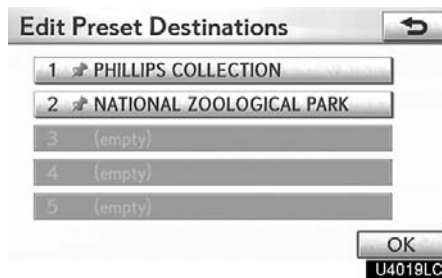

5. Touch the button of the desired preset destination.

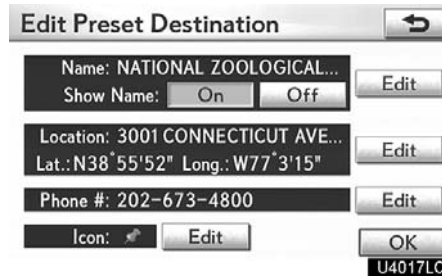

6. Touch "Edit" for the item you want to change.

"Name": To edit preset destination names. The names can be displayed on the map. (See page 118.)

"Location": To edit location information. (See page 119.)

"Phone #": To edit telephone numbers. (See page 119.)

"Icon": To select icons to be displayed on the map. (See page 117.)


7. Touch "OK".

(c) Deleting preset destinations

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Delete".

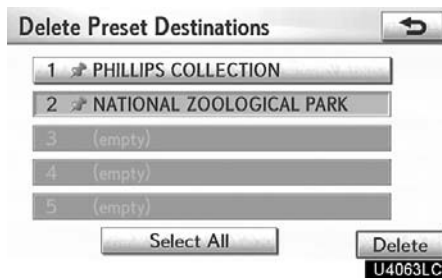

5. Touch the preset destination for deletion.

"Select All": To select all preset destinations on the list.

"Unselect All": To unselect all of the selected preset destinations.

6. Touch "Delete".

7. To delete preset destination, touch "Yes". To cancel the deletion, touch "No".


— Setting up the "Address Book"

Points or areas on the map can be registered.

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.




3. Touch "Address Book".

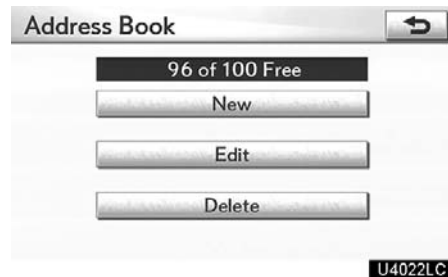


- Registering address book entries (See page 115.)
- Editing address book entries (See page 116.)
- Deleting address book entries (See page 120.)

(a) Registering address book entries

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Address Book" on the "Navigation Settings" screen.

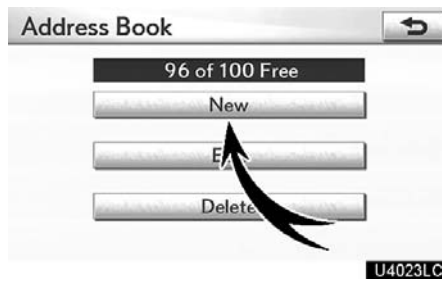


4. Touch "New".

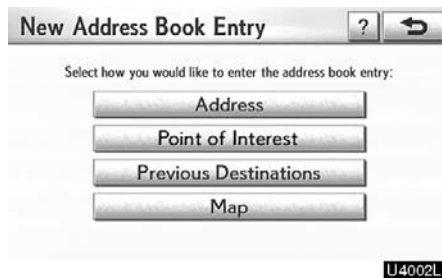

5. Enter the location in the same way as for a destination search. (See "Destination search" on page 60.)

After the address book entry has been registered, the "Edit Address Book Entry" screen will be displayed.

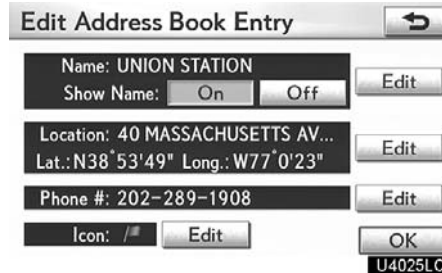

6. Touch "OK".

To edit registered information, see "(b) Editing address book entries" on page 116.


INFORMATION

Up to 100 address book entries can be registered.


(b) Editing address book entries

The icon, name, location and/or telephone number of a registered address book entry can be edited.


1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Address Book” on the “Navigation Settings” screen.

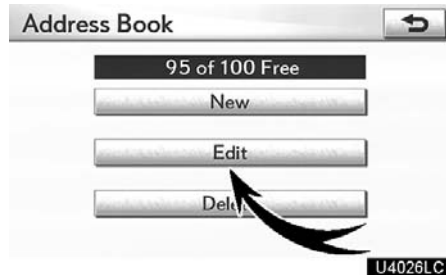

4. Touch “Edit”.

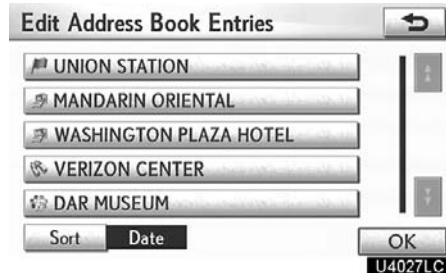

5. Touch the button of the desired address book entry.

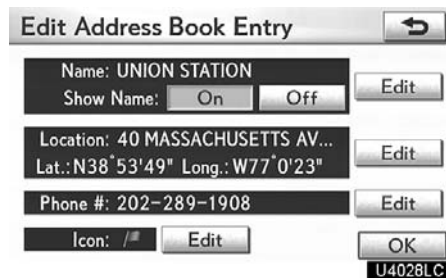

6. Touch “Edit” for the item you want to change.

“Name”: To edit address book entry names. The names can be displayed on the map. (See page 118.)


“Location”: To edit location information. (See page 119.)

“Phone #”: To edit telephone numbers. (See page 119.)


“Icon”: To select icons to be displayed on the map. (See page 117.)

7. Touch “OK”.

- To change “Icon”

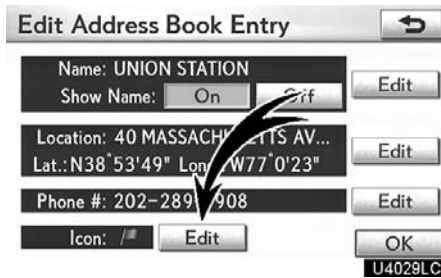

1. Touch “Edit” of “Icon”.

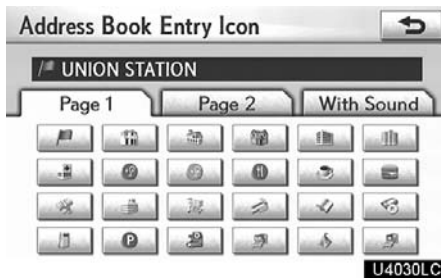


2. Touch the desired icon.

Change pages by touching “Page 1”, “Page 2” or “With Sound” tab.

SOUND ICONS


You can set a sound for some address book entries. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

1. Touch “With Sound” on the “Address Book Entry Icon” screen.

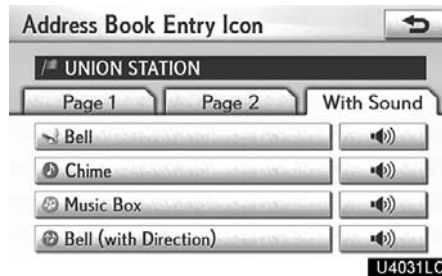

2. Touch the desired sound icon.


The next screen appears when “Bell (with Direction)” is touched.

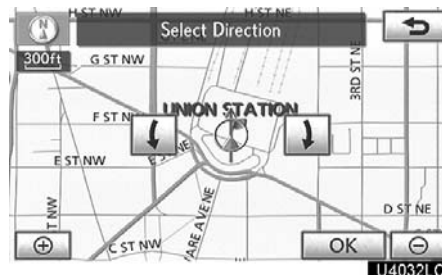


Touch either  or  to adjust the direction. Touch “OK”.

The bell sounds only when the vehicle approaches this point in the direction that has been set.

- To change “Name”

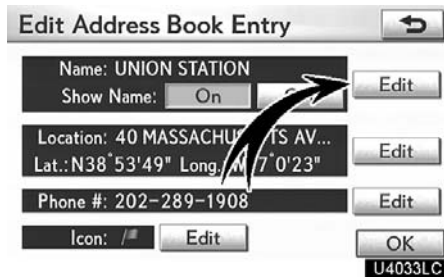

1. Touch “Edit” of “Name”.

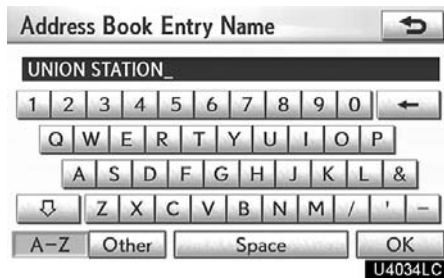

2. Enter the name using the alphanumeric keys.


Up to 32 characters can be entered.

3. Touch “OK”.

The previous screen will be displayed.


DISPLAYING MEMORY POINT NAMES

The name of an address book entry can be set to display on the map.

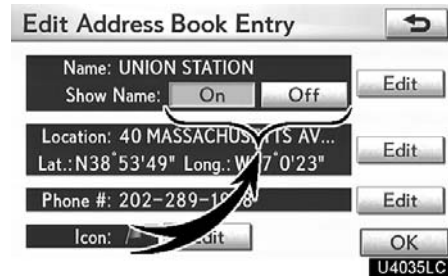

To show the name, touch “On” on the “Edit Address Book Entry” screen. To not show it, touch “Off”.

- To change "Location"

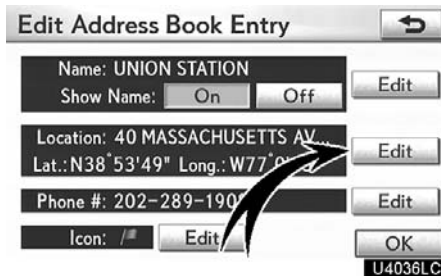


1. Touch "Edit" of "Location".




2. Touch one of the 8 directional buttons to move the cursor to the desired point on the map.
3. Touch "OK".

The previous screen will be displayed.

- To change "Phone #" (telephone number)

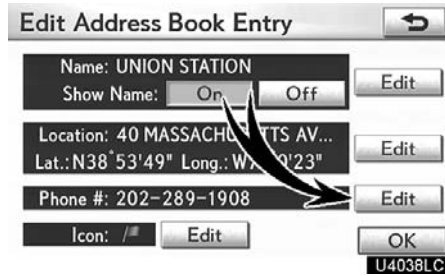

1. Touch "Edit" of "Phone #".

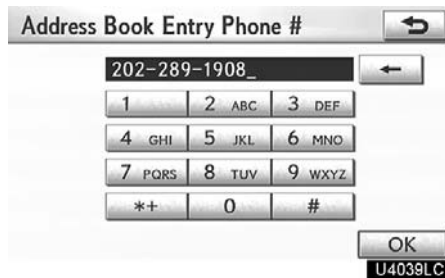


2. Enter the number using number keys.
3. Touch "OK".


The previous screen will be displayed.

(c) Deleting address book entries

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Address Book” on the “Navigation Settings” screen.

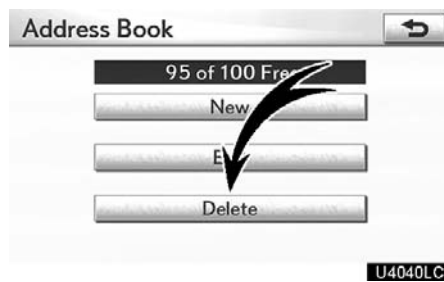

4. Touch “Delete”.

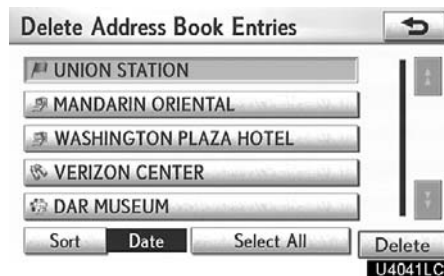

5. Touch the button to be deleted.

“Select All”: To select all addresses in the address book.

“Unselect All”: To unselect all of the selected addresses.

6. Touch “Delete”.

7. To delete the address book entry, touch “Yes”. To cancel the deletion, touch “No”.

— Setting up the “Areas to Avoid”

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Areas to Avoid”.



- Registering areas to avoid (See page 121.)
- Editing areas to avoid (See page 122.)
- Deleting areas to avoid (See page 125.)

(a) Registering areas to avoid

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Areas to Avoid” on the “Navigation Settings” screen.



4. Touch “New”.





5. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “Destination search” on page 60.)



6. Scroll the map to the desired point. “Adjust Location”: To adjust the position in smaller increments.

7. Touch “Enter”.



8. Touch either  or  to change the size of the area to be avoided.

9. Touch “OK”.

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.

NAVIGATION SYSTEM: MEMORY POINTS


(b) Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the **"SETUP"** button.
2. Touch **"Navi."** on the **"Setup"** screen.
3. Touch **"Areas to Avoid"** on the **"Navigation Settings"** screen.



4. Touch **"Edit"**.

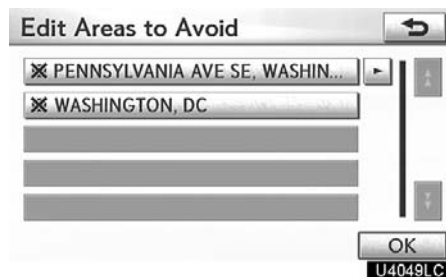

5. Touch the desired area button.

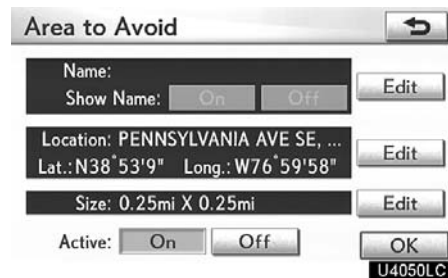

6. Touch **"Edit"** for the item you want to change.

"Name": To edit the name of the area to avoid. The names can be displayed on the map. (See page 123.)


"Location": To edit area location. (See page 124.)

"Size": To edit area size. (See page 124.)

"Active": To turn on or off the area to avoid feature. To turn on the feature, touch **"On"** on the **"Area to Avoid"** screen. To turn off the feature, touch **"Off"** on the **"Area to Avoid"** screen.

7. Touch **"OK"**.

● To change “Name”

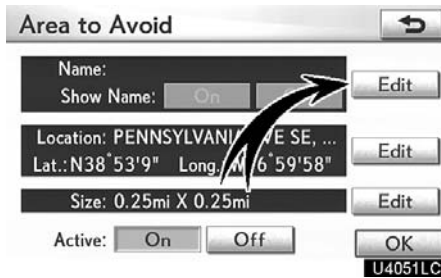

Area to Avoid

Name: Edit

Show Name: ☒ On ☐ Off

Location: PENNSYLVANIA AVE SE, ... Edit

Lat.: N38°53'9" Long.: W76°59'58" Edit

Size: 0.25mi X 0.25mi Edit

Active: ☒ On ☐ Off OK

U4051LC

1. Touch “Edit” of “Name”.



Area to Avoid Name

Enter a name

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

↵ Z X C V B N M / ' -

A-Z Other Space OK

U4052LC

2. Enter the name using alphanumeric keys.


Up to 32 characters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

DISPLAYING NAMES OF AREAS TO BE AVOIDED

The name of an area to be avoided that may be displayed on the map can be set.

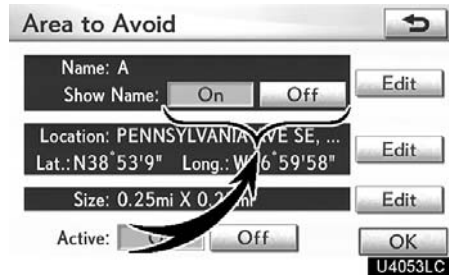

Area to Avoid

Name: A Edit

Show Name: ☐ On ☒ Off

Location: PENNSYLVANIA AVE SE, ... Edit

Lat.: N38°53'9" Long.: W76°59'58" Edit

Size: 0.25mi X 0.25mi Edit

Active: ☒ On ☐ Off OK

U4053LC

To show the name, touch “On” on the “Area to Avoid” screen. To not show it, touch “Off”.

NAVIGATION SYSTEM: MEMORY POINTS

● To change “Location”

This screenshot shows the 'Area to Avoid' settings screen. The 'Location' field is highlighted with a black box and an arrow pointing to the 'Edit' button next to it. The 'Size' field is also highlighted with a black box and an arrow pointing to the 'Edit' button next to it. The 'Active' toggle is set to 'On'.

Area to Avoid

Name: Show Name:

Location: PENNSYLVANIA AVE SE, ...

Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4054LC

1. Touch “Edit” of “Location”.



2. Touch the 8 directional button to move the cursor to the desired point on the map.

3. Touch “OK”.

The previous screen will be displayed.

● To change “Size”

This screenshot shows the 'Area to Avoid' settings screen. The 'Size' field is highlighted with a black box and an arrow pointing to the 'Edit' button next to it. The 'Location' field is also highlighted with a black box and an arrow pointing to the 'Edit' button next to it. The 'Active' toggle is set to 'On'.

Area to Avoid

Name: Show Name:

Location: PENNSYLVANIA AVE SE, ...


Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4056LC

1. Touch “Edit” of “Size”.

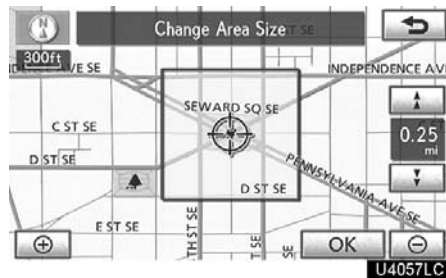

2. Touch either or to change the size of the area to be avoided.

3. Touch “OK”.

The previous screen will be displayed.


(c) Deleting areas to avoid

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Areas to Avoid” on the “Navigation Settings” screen.



U4058LC

4. Touch “Delete”.

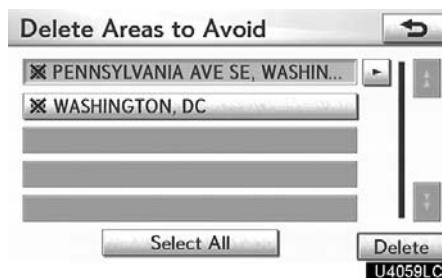

U4059LC

5. Touch the button to be deleted.

“**Select All**”: To select all registered areas to avoid in the system.

“**Unselect All**”: To unselect all registered areas to avoid in the system.

6. Touch “Delete”.

7. To delete the area, touch “Yes”. To cancel the deletion, touch “No”.

— Deleting previous destinations


The previous destination can be deleted.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



U4060LC

3. Touch “Delete Previous Dest.”.

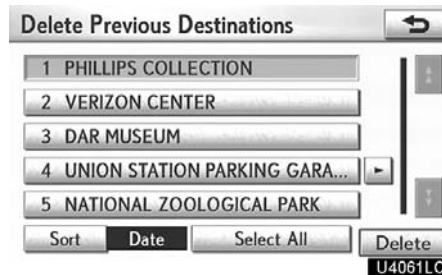

U4061LC

4. Touch the button you want to delete.

“**Select All**”: To select all previous destinations in the system.

“**Unselect All**”: To unselect all previous destinations in the system.

5. Touch “Delete”.

NAVIGATION SYSTEM: MEMORY POINTS



6. To delete the destination, touch "Yes". To cancel the deletion, touch "No".